


Make Your Own Brine - A Guide

WISCONSIN SALT WISE

1

GATHER MATERIALS

- Pump sprayer
- Warm tap water
- Water softener salt
- Eye protection and gloves are recommended

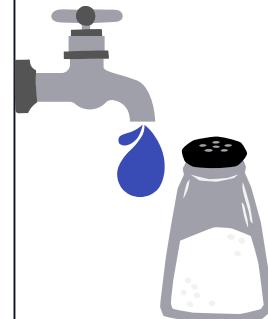

2

MEASURE

- Typically, you will need 1/2 gallon of brine per 1,000 square feet of icy pavement
- Measure 3.5 cups (or 2.5 pounds) of salt for every one gallon of water



3

MIX TOGETHER


- Mix salt and warm water by shaking pump sprayer until all salt dissolves
- Remix brine that has been sitting stagnant for awhile



4

APPLY BRINE TO SURFACE

- Shovel, sweep, or plow surface as clear as possible
- Spray a layer of brine on thin ice
- Note: Brine cannot melt thick slabs of ice like regular rock salt

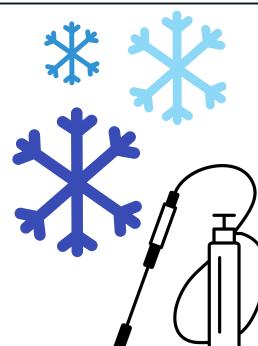

THANKS FOR BEING SALT-WISE!

- Using brine reduces the amount of salt that ends up in our waterways
- For more info visit: www.wisaltwise.com

Be
**Salt
WIse!**